



# How to setup a file for Epson F3070 DTG printers in Photoshop.

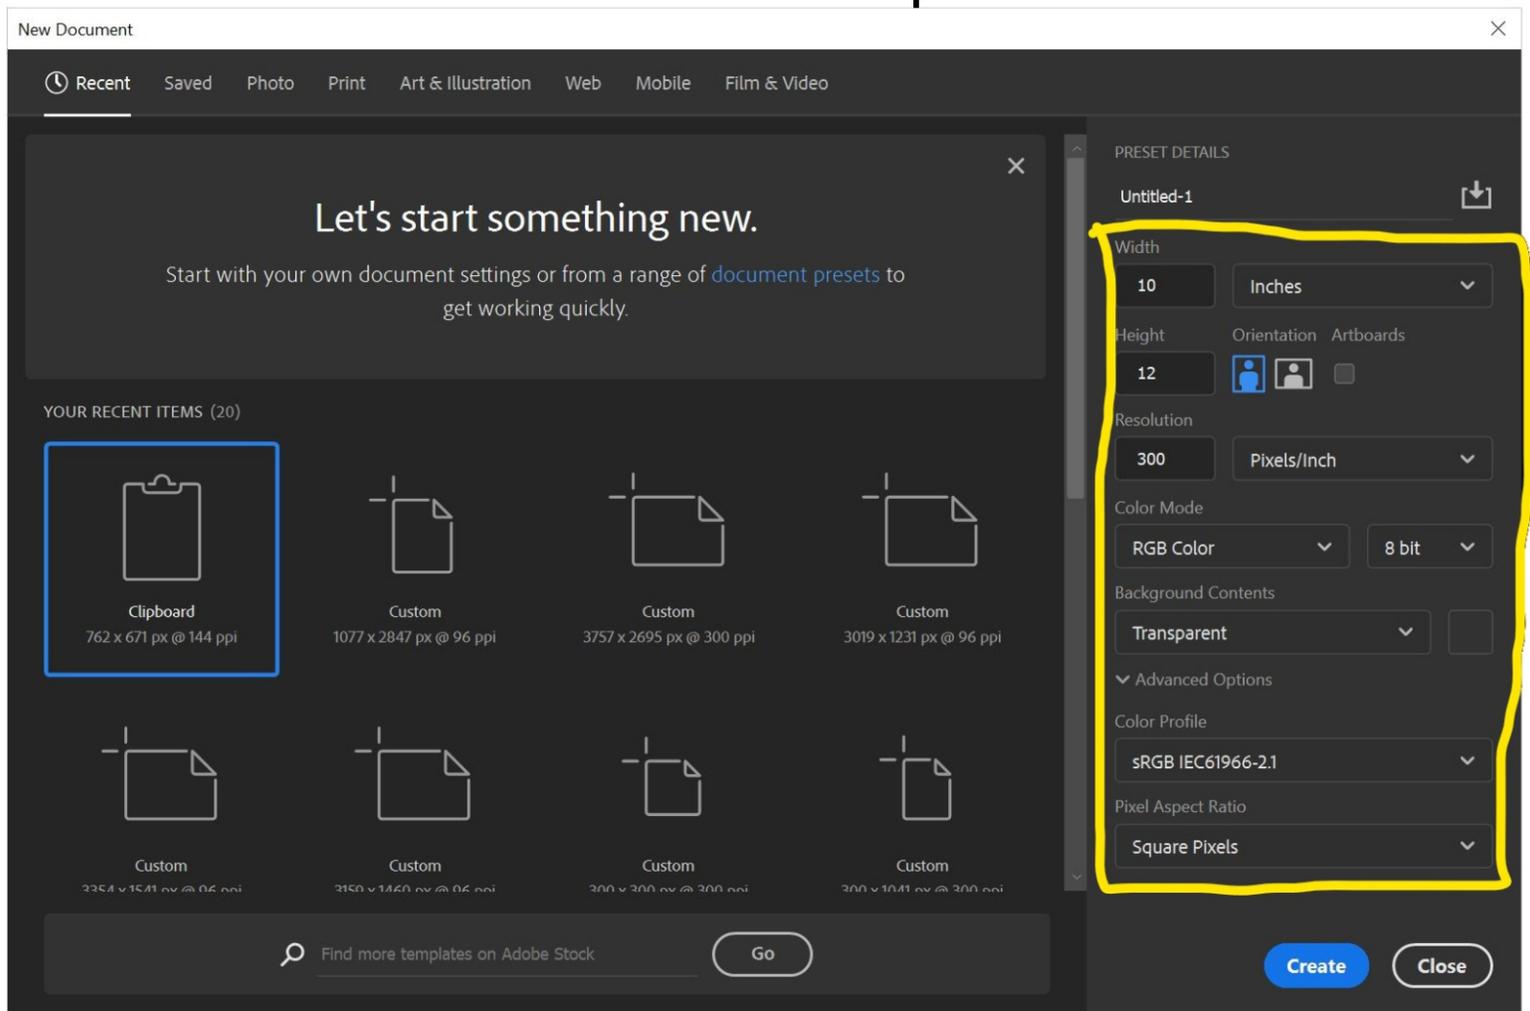


1. Make a new file with the following settings
  - a. Set your width and height (in inches) for the size you want your design to be.
  - b. Set your orientation (landscape or portrait)
  - c. Set your resolution to 300 Pixels/Inch
  - d. Set color mode to RGB Color 8 bit
  - e. Set your background (in most cases, this should be transparent)
  - f. Set your color profile to sRGB IEC61966-2.1
  - g. Set your pixel aspect ratio to Square Pixels

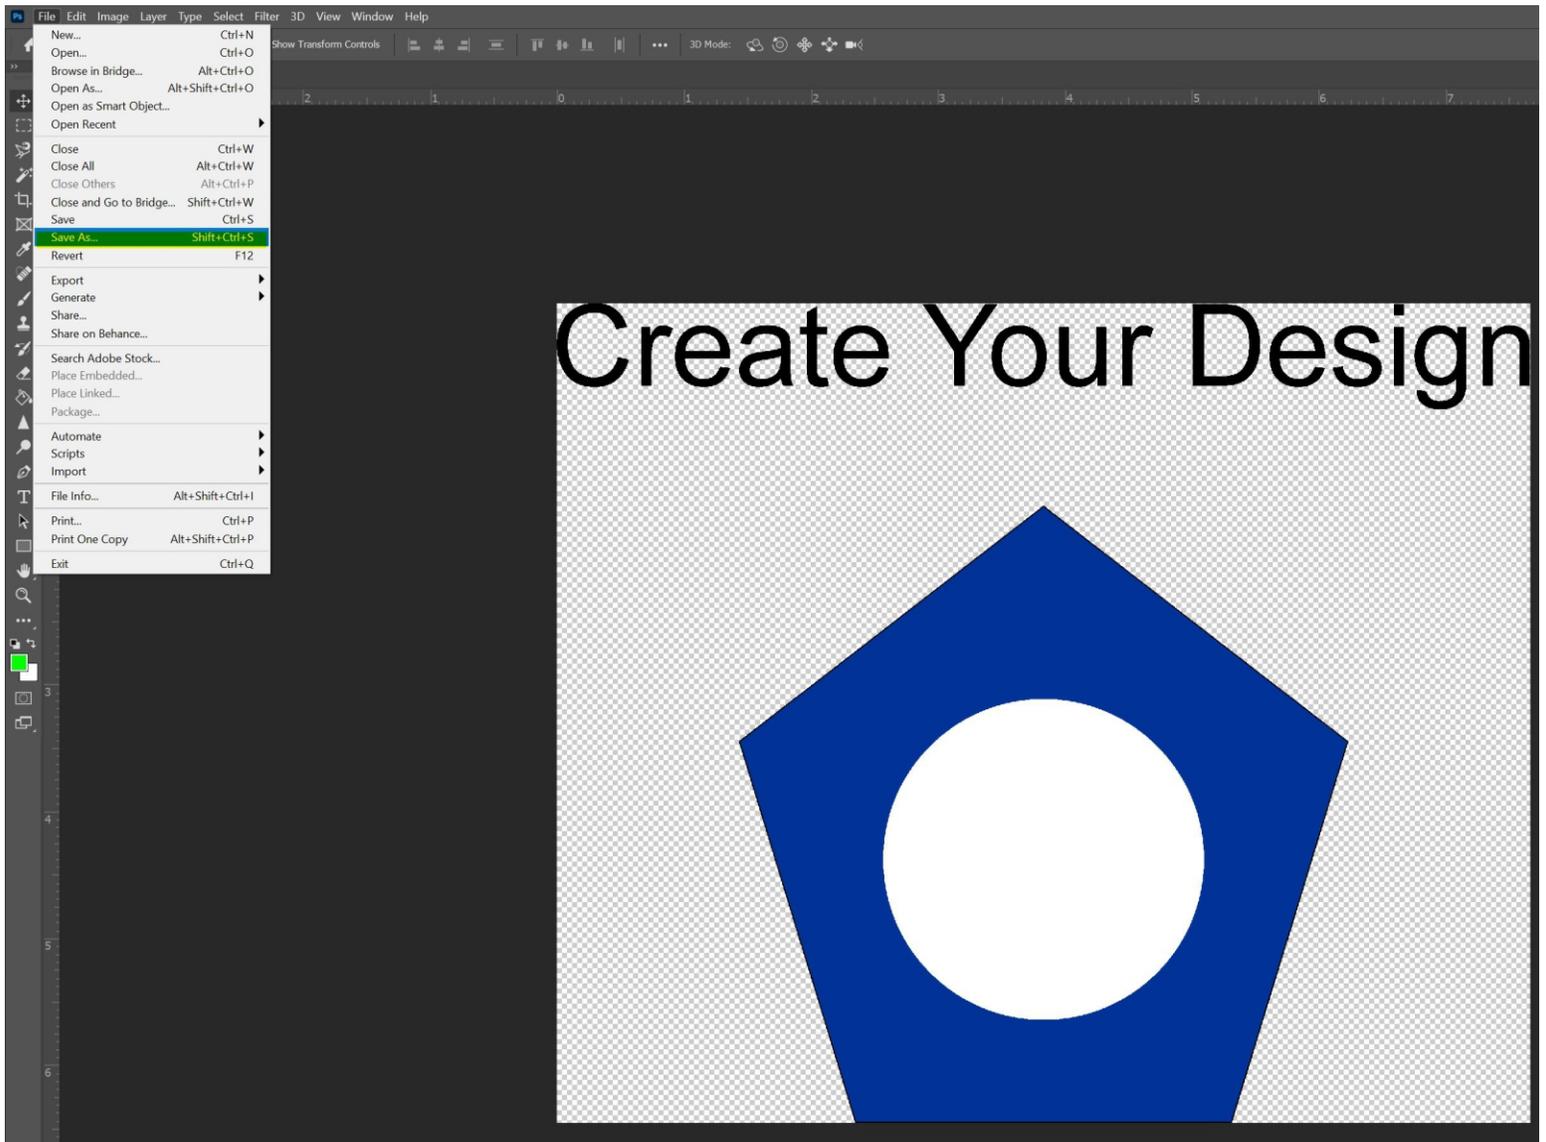


2. Create your design using only RGB color values. Do not put anything in the design that you do not want printed. This includes notes, backgrounds, mockups, etc. If you made your canvas the correct size in step 1, you should fill most of the space. Save a master copy in .psd format for editing later.

When you are done, go to File > Save As.  
DO NOT use "Export As"

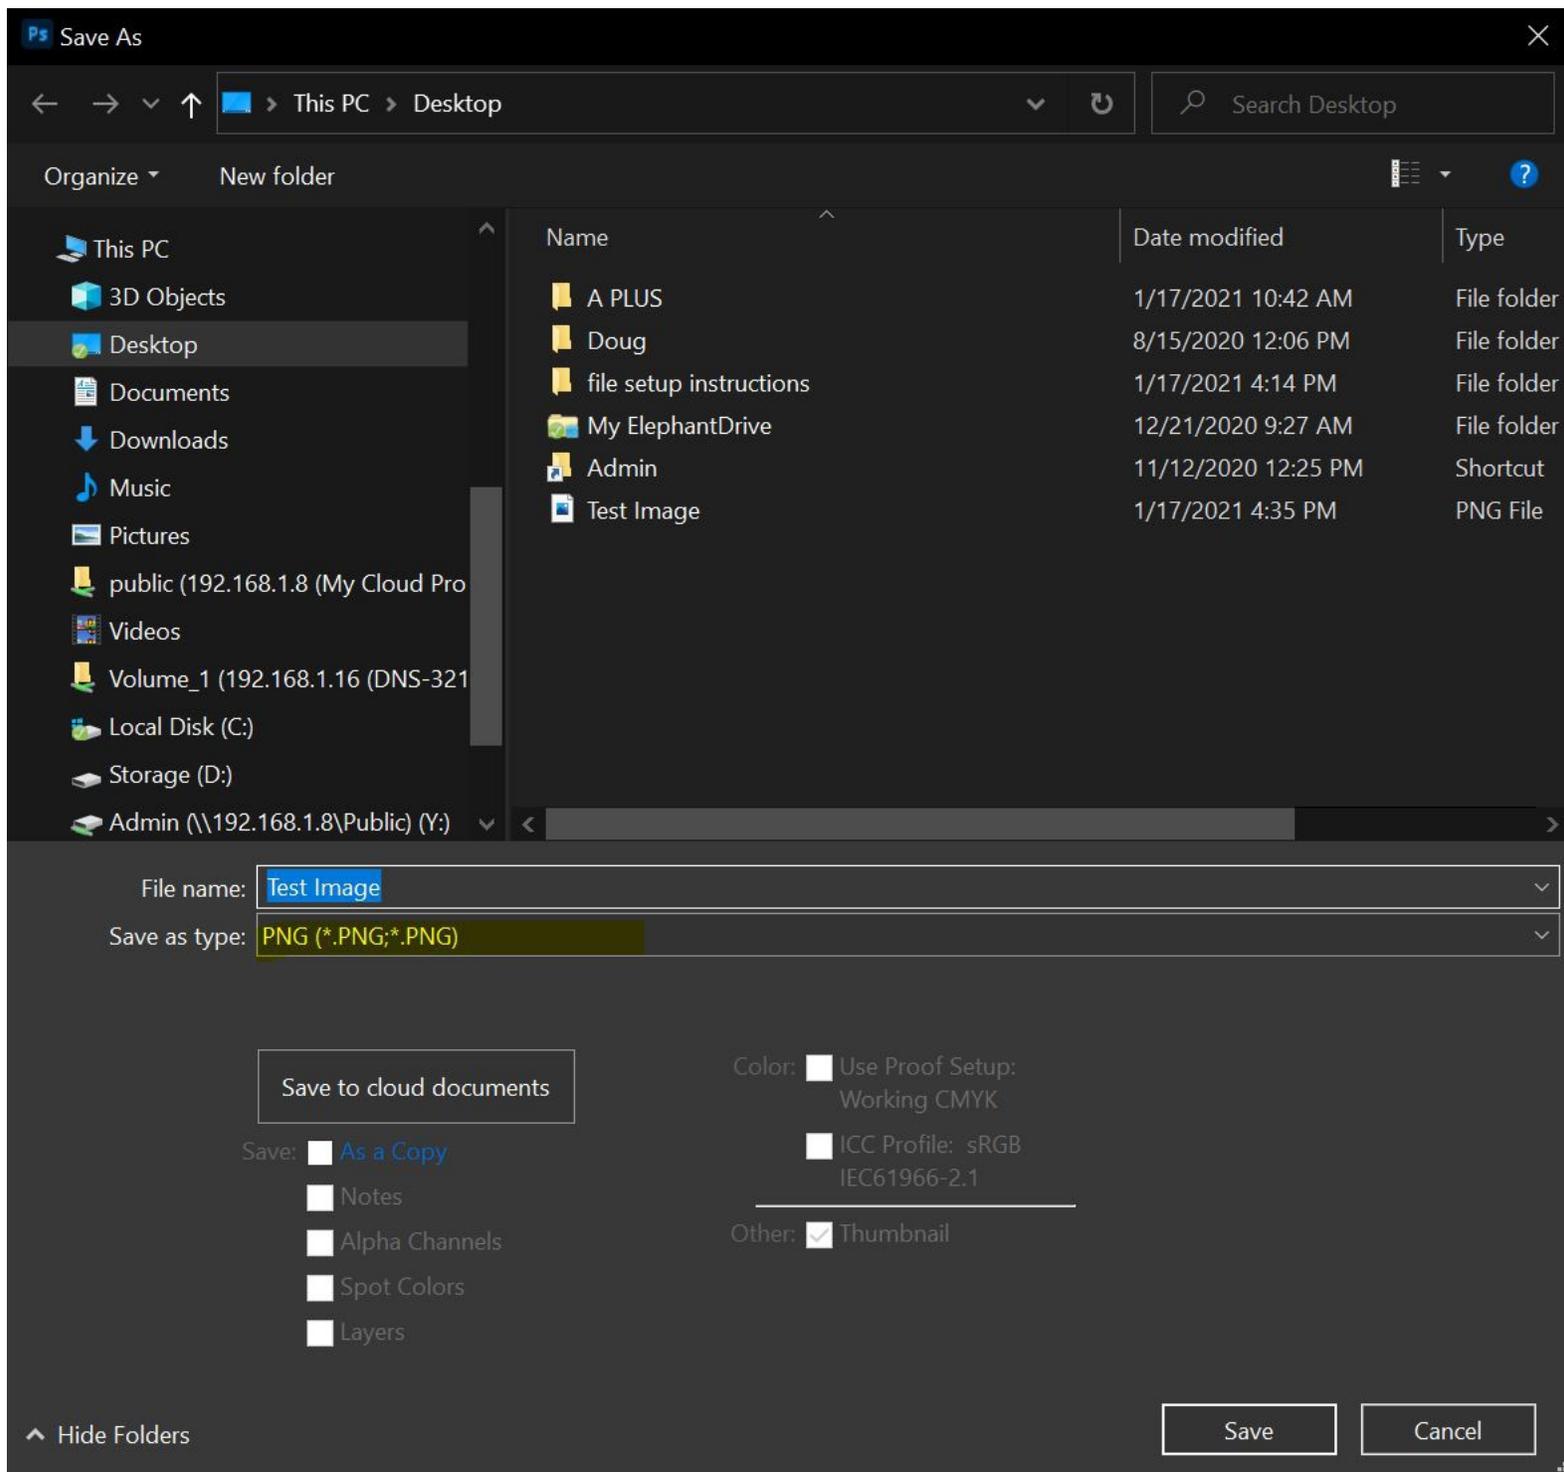

3. Make your settings for the first save screen
  - a. Name your file
  - b. Save as type: PNG (\*.PNG; \*.PNG)
  - c. Click Save

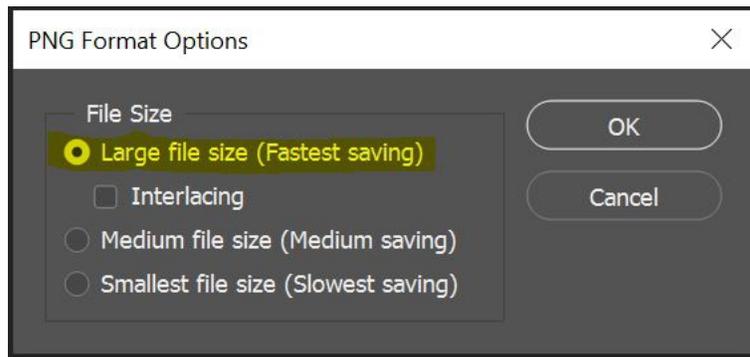

4. Make your settings for the second save screen
  - a. Click the radio button for “Large file size (fastest saving)”
  - b. Do not check “Interlacing”
  - c. Click OK